
Installation Instructions

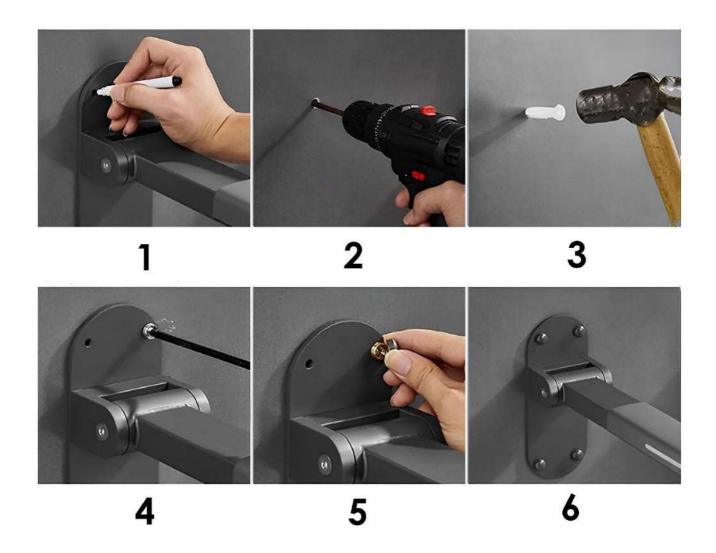

- 1. Measure the height and mark the punching position
- 2. Drill holes with a drill bit
- 3. Tap in the expasion screw
- 4. Align the hole position and first tighten the cap screws
- 5. Install tge decorative cap
- 6. Tighten it on screw